

Replace the wick of an Ideal Burner




Remove the glass chimney and check for dead bugs and dirt which can block air supply.

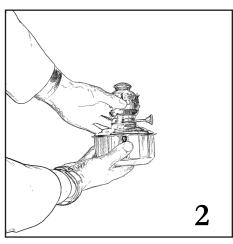


Unscrew the burner and be careful not to use the adjustment knob as a lever as it may bend or break.

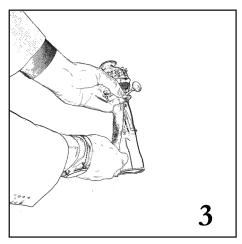


In case of the Ideal burner, pull the wick out of the "C" clip on the bottom plate of the wick raiser.

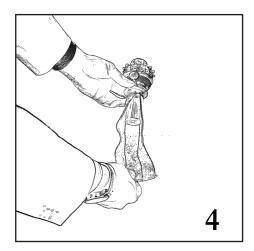

Turn down the wick as far as possible by turning the knob untill the three "claws" fold inwards. Gently pull the wick out of the bottom.

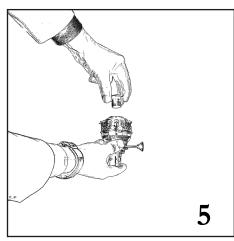

Remove the flamespreader by pulling it out from the top.

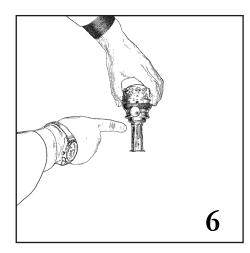


Check if the three claws are still folded inwards. If not, turn the mechanism down until they do.




Copyright Den Haan Rotterdam www.dhr.nl



A step by step guide

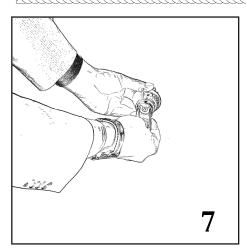


Feed the wick in by curving it. When the wick won't go further up the burner, gently turn the adjustment knob until it appears on top. If this doesn't work, apply the trick from Step 8.

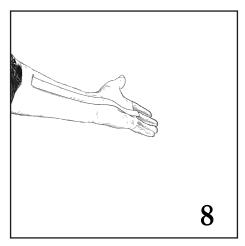


Apply painters tape, approximately 20cm (8") in length, to your arm. Do this to remove excess glue on the tape that could end up in the burner.



Then you can apply the tape on one end of the wick. Double it precisely so the tape won't stick inside the burner.

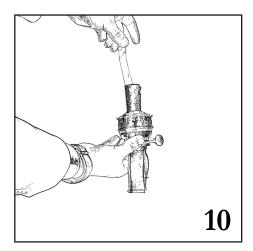

Feed the tape through the burner. When it appears on top, gently pull the tape untill the wick reaches through. Put the wick back in the "C" clip on the bottom and turn the wick up or down until it is approximately 1mm above the burner.

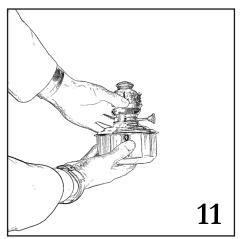

Fill the oil container up to 3/4 with lamp oil. Screw the burner back in and wait 15 - 30 minutes for the wick to saturate with oil. Subsequently light the oil lamp for a few minutes. Extinguish the flame and wait for the burner to cool.



Take a sharp knife and trim the wick around the edge. This is called "snuffing" and is done to create an even height all the way around. Put your flame-spreader and glass chimney back on and your oil lamp is ready to go. We advise you to do this regularly during the season.